


blue
by Blueair

空氣清淨機/
Air Purifier

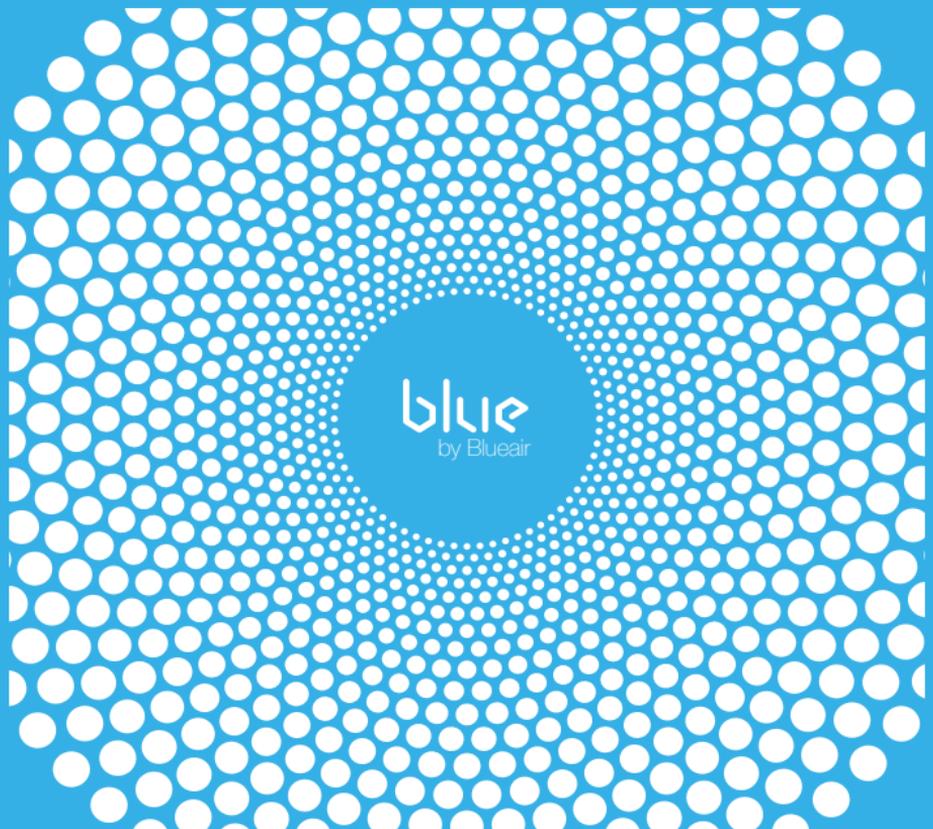

blue
by Blueair

取扱説明書/User Manual

Blue
PURE 221

Blue PURE 221

取扱説明書 モデル: Pure221 ご使用になる前には必ず本書をお読みください。また、お読みになったあとは大切に保管してください。	03 - 20
English User Manual Model: Pure221	23 - 37

安全上のご注意	03
各部の名前	08
同梱物	10
使用上の注意	11
設置する	12
初めて使うとき	13
電源のオン/オフと稼動調整	14
フィルターについて	15
お手入れについて	18
アフターサービス	19
仕様	20

安全上のご注意

本製品は安全を十分に考慮して設計されていますが、一般に電気製品は取り扱いを誤ると大きな事故につながる可能性があります。次の注意事項をお守りになり、安全にご使用ください。



警告

次の警告事項を必ずお守りください。警告を守らずに使用した場合、火災や感電などにより使用者の死亡や大けがを伴う事故につながる可能性があります。



指示

煙が出る、変な臭いがするなどの異常および故障時には、ただちに使用を中止する

そのまま使い続けると、発火や感電の原因になります。異常を感じた場合は、すぐに差込プラグを電源コンセントから抜き、「ブルーエアサービスセンター」へご連絡ください。



指示

差込プラグを電源コンセントに差し込むときは、まっすぐに突き当たるまで差し込む

差込プラグが外れかけたまま使用すると、感電や火災の原因になります。



指示

交流100Vで使用する

本製品は日本国内用です。交流100V以外で使用すると火災の原因になります。



指示

差込プラグと電源コンセントの接続部分は、ホコリなど定期的に除去する

差込プラグにホコリがたまると、湿気などによる絶縁不良が起こり、感電や火災の原因になります。



電源コンセントから差込プラグを抜くときはコードを引っ張らず、必ずプラグを持って抜く

指示

コードを引っ張ると、コードの中の電線が切れ、ショートによる感電や火災の原因になります。



幼児の手が届かないように設置する

指示

小さなお子様が誤って指などを挟み、けがや感電の原因になります。



子どもが本製品で遊ばないように注意する

指示

けがや事故の原因になります。



水分（ペットの尿や加湿器からの水蒸気など）がかからない場所に設置する

指示

火災や感電の原因になる場合があります。また、ペットの尿や加湿器からの水蒸気などがかからないようご注意ください。



自分で本製品を分解や改造、修理しない

分解禁止

製品内部には電圧の高い部分があります。感電や火災の原因になりますので、分解や改造、修理をしないでください。



濡れた手で差込プラグをさわらない

濡れ手禁止

濡れた手で差込プラグを抜き差しすると、感電の原因になります。



運転中に電源コンセントから差込プラグを抜かない

禁止

火災や感電の原因になります。



電源コードや差込プラグを熱器具に近づけない

感電や火災の原因になります。

禁止



電源タップや延長コードを使った「たこ足配線」で、定格を超えた接続をしない

電源コードや差込プラグの負荷が大きくなり、感電や火災の原因になります。

禁止



本体に水をかけない

火災や感電の原因になる場合があります。

禁止



吸込口・吹出口や本体のすき間に指や金属物などの異物を入れない

感電やけが、故障の原因になります。

禁止



油や可燃性ガスなどを使用する場所、漏れるおそれのある場所に設置しない

引火や、ガス吸引による発火や発煙の原因になります。

禁止



次のような可燃性の高いものを本体に近づけない

- ・ヘアスプレーや殺虫剤など
- ・火のついたタバコや線香など
- ・ベンジンやシンナーなど

引火や感電の原因になります。

禁止



塩素系や酸性の洗剤を使ってお手入れをしない

洗剤からの有毒ガスによって健康を害する場合があります。

禁止



電源コードが破損した場合は、そのまま放置したり自分で修理したりしない

禁止

破損した状態のまま使用し続けると、感電や火災、ショートの原因になります。すぐに差込プラグを電源コンセントから抜き、「ブルーエアサービスセンター」へご連絡ください。



子どもや、知覚・精神障害がある方、経験や知識が不足している方は、安全に使用するための注意や説明を受けることなしに使用しない

禁止

けがや事故の原因になります。



長い間使用しない場合は、差込プラグを電源コンセントから抜いておく

プラグをコンセントから抜く

差込プラグにホコリがたまると、湿気などによる絶縁不良が起こり、感電や火災の原因になります。



フィルター交換やお手入れ、点検、本体移動の場合は、運転を停止し電源を抜く

プラグをコンセントから抜く

電源が入ったまま行くと、感電やけがの原因になる場合があります。



注意

次の注意事項を必ずお守りください。注意を守らずに使用した場合、使用者のけがや周辺の物品損害を伴う事故につながることがあります。



指示

壁などから10cm以上離して設置する

空気が流れが悪くなり、発熱や発火の原因になります。



安定した水平な床面に設置する

本製品は床置き専用です。壁にかけたり、棚に置いたりはできません。万一、本製品が転倒すると、けがや家財破損の原因になります。

指示



浴室など高温多湿、水のかかる場所に設置しない

火災や感電の原因になる場合があります。

禁止



動植物に直接風が当たる場所に設置しない

動植物に長時間風が当たり、乾燥する原因になります。

禁止



カーテンや洗濯物で吸込口や吹出口を塞がない

発熱や発火の原因になります。

禁止



発煙ないしは霧タイプの殺虫剤使用時には運転しない

本体内部に蓄積した薬剤成分が、再運転後に吹出口から放出され、健康を害する場合があります。殺虫剤の使用後は、十分に換気を行ってからご使用ください。

禁止



上に乗ったり、寄りかかったり、横倒して使ったりしない

転倒によるけがや故障の原因になります。

禁止



移動するときは、本体から外れる部分を持たない

落下によるけがや故障の原因になります。

禁止




燃焼器具と一緒に使う場合は必ず換気する

本製品は換気ができません。そのため、燃焼器具から発生する一酸化炭素による中毒の原因になる場合があります。

禁止

各部の名称

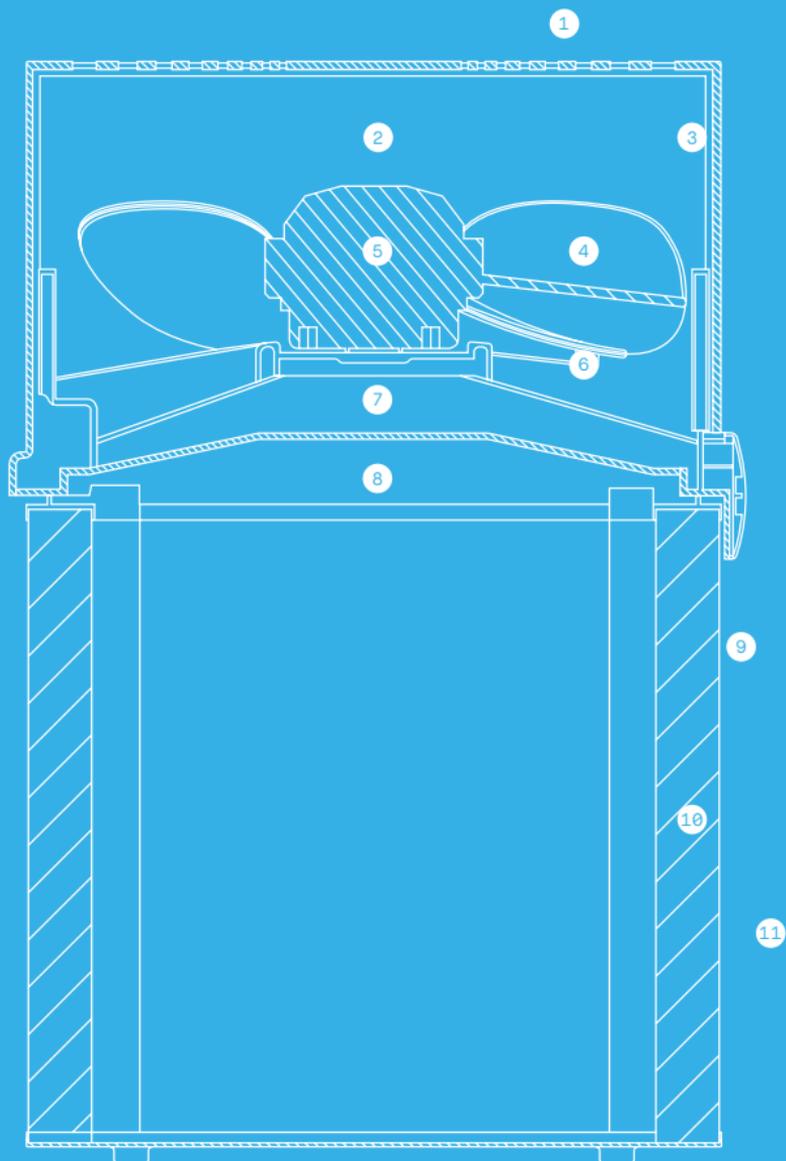


各部の名前

- ① 吹出口
- ② イオンチャンバー
- ③ インナーウォール
- ④ ファン
- ⑤ モーター
- ⑥ ファンベース
- ⑦ ファンプロテクター
- ⑧ 取り外しボタン
- ⑨ スチールカバー
- ⑩ フィルター
- ⑪ 360°吸込口

Pure 221 同梱物



Pure 221 空気清浄機

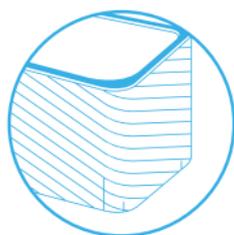

フィルター (内蔵)

- 取扱説明書：1部
- 保証書：1部

フィルターオプション

- Particle + Carbonフィルター
- Particleフィルター

使用上の注意

- **LEDが赤く点灯したら、フィルターを交換する**

交換をしないと集じん効果が得られないばかりか故障の原因になります。交換の目安は約6ヶ月です。詳しくは「フィルターについて」をご確認ください。

- **Pure 221空気清浄機純正の付属品やフィルターを使用する**

純正の付属品やフィルターを使用しないと故障の原因になります。純正以外の付属品やフィルターを使用して生じた故障は保証の対象外です

- **フィルターは水洗いしない**

集じん効果が低下します。

- **熱器具（暖房器具など）、熱い物の近くで使用しない**

変色の原因になります。

- **使用中は窓や扉を閉めて使用する**

- **直射日光が当たる場所で使用しない**

変色の原因になります。

設置する

安定した水平な床面に置いてください。設置の際は、空気の流れを遮らない程度に周囲には少なくとも10cm以上のすき間を空けてください。

寝室で使用する場合

LEDは約7秒後に明るさを落とし、薄暗くなるため就寝中でも安心してお使いいただけます。



本体周辺に空気が循環できるスペースを空けて設置してください



ストーブなど熱源の近くに置かないでください



本体の周辺10cm以内には物を置かないでください



トイレや浴室、洗濯機など水がかかる場所に設置しないでください




寝具やリネンなど柔らかい布に当たる場所には設置しないでください



屋外に設置しないでください

初めて使うとき

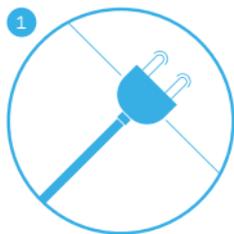

Pure221空気清浄機の電源コードの差し込みプラグを電源コンセントに差し込みます。



ボタンをタッチして、電源を入れます。電源を入れるとスピード1で稼働し始めます。



正常に運転している場合、ランプが白く点灯します。新鮮な空気をお楽しみください。

電源のオン/オフと稼働調整



オン/低速

1回押すと、本体の電源が入り、スピード1で稼働し始めます。




中速

2回押すと中速に設定されます。



高速

3回押すと高速に設定されます。

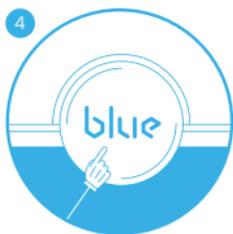

オフ

もう1回押すと本体の電源が切れます。


Pure 221は、稼働中にコンセントからプラグを抜いた場合や停電などで電源が切れた場合に、稼働を再開させた時は電源が切れる前に設定されていたスピードで稼働し始めます。

フィルターについて

フィルター

本体にはParticleフィルターまたはParticle + Carbonフィルターが装着されています。これらのフィルターは以下の汚染物質を除去します：

Particleフィルターが除去するもの：

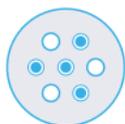

PM2.5*



ほこり



花粉



ペットのダニ



カビ



ダニ



バクテリア

Particle + Carbonフィルターが除去するもの（上記に加えて）：



VOC



タバコ煙



化学物質



調理臭

*2.5ミクロン以下の微小な粒子状の物質

注意! 正しく使用するためにも、また機能を十分に発揮するためにもピュア221空気清浄機純正のフィルターを使用してください。

フィルター交換お知らせ機能



フィルター交換の準備
ランプが黄色に点灯したら（約5ヶ月後）、交換用のフィルターをご準備ください。



フィルター交換
ランプが赤く点灯したら（約6ヶ月後）、交換時期です。フィルターを交換してください。



本体のリセット
フィルター交換サインをリセットするには、ボタンを3秒間長押ししてください。


ランプが赤色に点灯する前でもフィルターを交換できます（黄色に点灯した時点で交換が可能です）。フィルター交換後は、本体をリセットしてください。（「フィルターを交換する」を参照）

フィルターを交換する

フィルターを交換する前に電源プラグをコンセントから抜いてください。




1 ランプが赤く点灯したら、フィルターを交換してください。

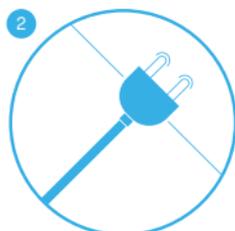


2 本体の電源をオフにして、電源プラグをコンセントから抜きます。




3 両側面の取り外しボタンをカチッと音がするまで軽く押します。

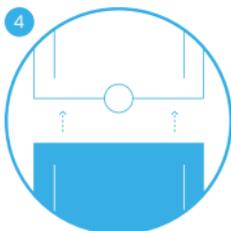

4 本体上部を持ち上げます。

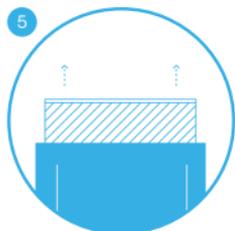


5 本体からフィルターを取り外します。

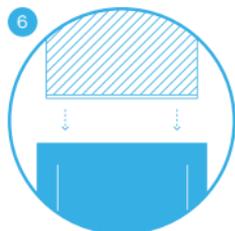


6 新しいフィルターを入れます。

フィルターについて

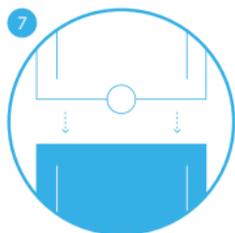

本体の上部をしっかりと取り付けます(カチッと音がするまで押ししてください)。

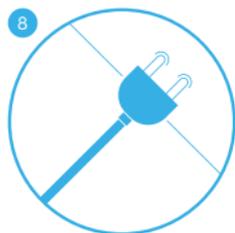

電源プラグをコンセントに差し込みます。



本体をリセットするには、Pure 221のボタンを3秒間長押ししてください。ランプが3回点滅し、赤色から白色に変わります。これで完了です!

お手入れについて

空気清浄機能を発揮できるように、定期的なお手入れとフィルター交換を行ってください。

- スチールカバーが汚れたときは、内側と外側に掃除機をかけ、ほこりを取り除いてください。
- 稼動状況にも寄りますが、フィルターは6か月ごとに交換してください。
- フィルター交換の際に、掃除機などで内部にたまっているほこりを取り除いてください。
- 表面や天面が汚れたら乾いた布でふいてください。
- お手入れ・フィルター交換を始める前には、必ず差し込みプラグを電源コンセントから抜いてください。

アフターサービス

- **保証期間は1年間です**

保証期間はお買い上げ日から1年間です。ただし、保証書を紛失すると、お買い上げから1年以内でも有料対応となります。また、ご使用状況によっても有料対応となる場合がありますので、保証書の記載内容をご確認のうえ、大切に保管してください。

- **保証期間中の修理について**

保証書の記載内容に基づいて修理致します。詳しくは保証書をご覧ください。

- **保証期間の終了後について**

修理可能な故障の場合は、ご希望により有料修理させていただきます。スムーズなアフターサービスをご提供するため、保証期間終了後も保証書を保管してください。

修理に関するご相談はブルーエアサービスセンターにお問い合わせください。交換用フィルターのお求めについては、購入店舗またはブルーエアサービスセンターへご連絡ください。

ブルーエアサービスセンター

0120-974-419 平日 9:30～17:30（土日・祝日・年末年始 除く）

携帯電話・PHSからもご利用いただけます。

お客様からご提供いただいた個人情報は、お問い合わせへの対応、カタログの発送、その他情報提供に利用させていただきます。

個人情報の取扱いについて

<http://www.blueair.jp/support/policy>

仕様

推奨フロア面積	50m ² (30畳)		
クリーンエア供給率 ¹ (CADR:Clean Air DeliveryRate)	タバコ煙 cfm m ³ /時	ダスト 350 590	花粉 350 590
電源	100V 50/60Hz		
フィルター交換お知らせ機能	あり		
タイマー機能	なし		
運転速度	スピード1、2、3		
外形寸法および本体質量	高さ: 幅: 奥行き: 本体質量:	522 mm 330 mm 330 mm 7 - 8 kg	
清浄空気供給量	230 - 620 m ³ /h (135 - 365 cfm)		
1時間あたりの清浄回数 ²	5回/時(フロア面積50m ² /540ft ² の場合)		
消費電力 ³	42 W		
運転音	37-55 dB(A)		
フィルター交換の目安	約6ヶ月 ⁴		
保証期間	1年間		

¹米国家電製品協会により定められた規格に基づき試験を行ったCADR値。CADR値から算出された推奨フロア面積および清浄空気供給量は、米国のParticleモデル(120VAC, 60Hz)での測定値。

²推奨されるフロア面積(高さ2.4m)を1時間で約5回清浄します。より狭い空間では、1時間あたりの清浄回数は増えます

³消費電力は100VAC 50/60Hzでの数値。ただし、使用する環境によるため、実際の消費電力と異なる場合があります

⁴使用環境により異なります。

発行日 2017年8月
発売元 セールス・オンデマンド株式会社
住所 〒101-0062
千代田区神田駿河台2-9 KDX御茶ノ水ビル 5F

注意

- 修理、交換した部品、付属品および製品は弊社で引き取らせていただきます。
- 製品は日本仕様です。日本国外で使用された場合、責任を負いかねます。

Blue PURE 221

English User Manual
Model: Pure221

SAFETY	24
SYSTEM OVERVIEW	26
WHAT'S IN THE BOX	28
USAGE	29
SETUP	30
ON/OFF AND OPERATING SPEEDS	31
FILTERS	32
CARE AND MAINTENANCE	36
SPECIFICATIONS	37

General safety instructions

Remember, Pure 221 is an electrical appliance. Please read these safety instructions carefully before use and take the necessary precautions to reduce the risk of fire, electric shock or injury. **The Pure 221 warranty applies only if the unit is used according to these instructions.**



WARNING: Indicates a hazardous situation that, if not avoided, could result in death or serious injury.



CAUTION: Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

General



WARNING:

To avoid hazardous conditions, only the manufacturer, a service center authorized by Blueair or similarly qualified persons shall replace the power cord, if damaged.



CAUTIONS:

- Use the grounded power cable provided with your Pure 221 unit to plug directly into an appropriate, grounded electrical outlet. (Refer to the rating label on your unit).
- Do not alter the plug in any way.
- Remember to always disconnect the power supply before servicing the unit.
- Do not use the unit if the power cable or plug is damaged or malfunctions in any manner.

- Keep the power cable away from heated surfaces.
- Do not sit on, stand or climb onto the unit or use the unit either as a table or for storage.
- Do not place any objects on top of the unit, block air outlets or intakes, or allow foreign objects to enter the unit as this may cause an electric shock or damage the unit.


Intended Use



CAUTIONS:

- Supervise children to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SYSTEM OVERVIEW

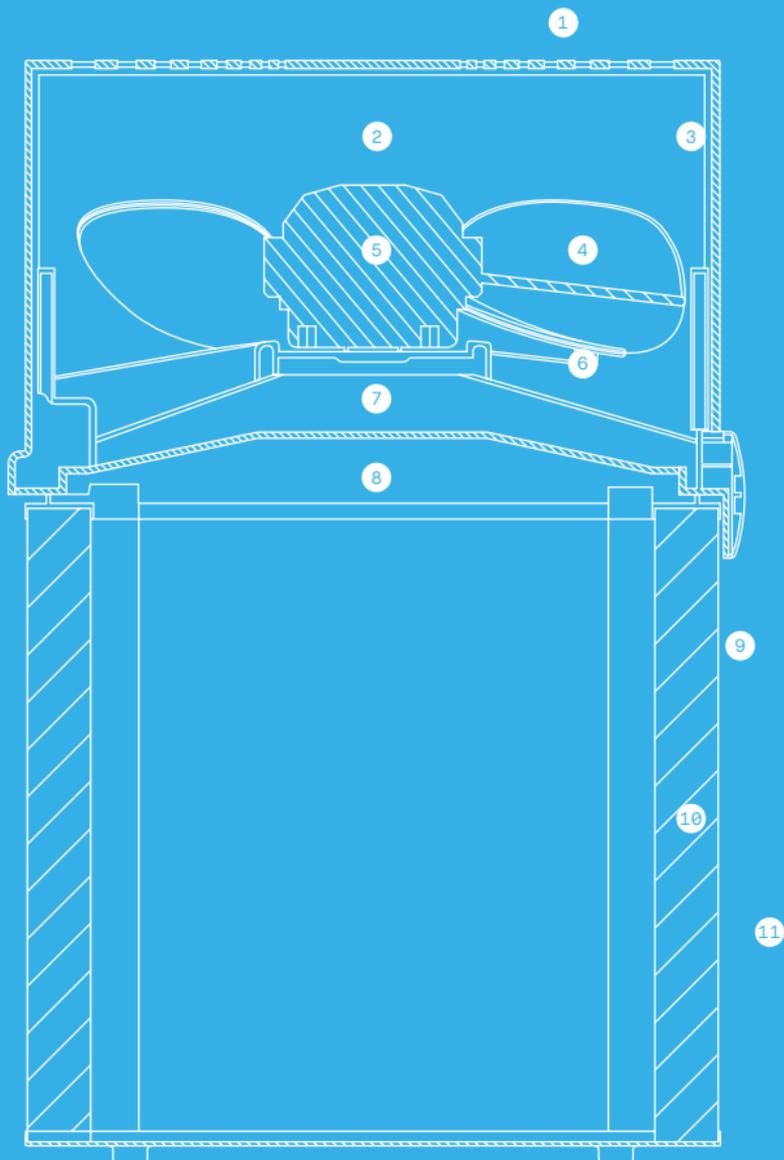

Blueprint

- 1 Air outlet
- 2 Ion chamber (Air stream optimizer)
- 3 Inner wall
- 4 Fan
- 5 Motor
- 6 Fan base
- 7 Protective grill
- 8 Release button for filter
- 9 Exterior casing
- 10 Particle filter or Particle + Carbon filter
- 11 Air inlet 360°

Pure 221 package



The Pure 221 air purifier



Particle or Particle + Carbon filter

Option

- A Particle filter or Particle + Carbon filter.

Placement

Place Pure 221 in an upright position on the floor in your room. Be sure to place the unit where it won't be knocked over by any person or pet in the household.

Using Pure 221 in your bedroom:

After 7 seconds the light automatically dims to 10% of the full effect.

Placing the unit:



Place the unit in a location where air can circulate freely in, out and around the unit.



Do not place the unit near sources of heat, such as radiators, fireplaces or ovens.



Do not place the unit closer than 10 cm (4") from another object.



Do not place the unit near wet areas, such as bathrooms or laundry rooms where it may come into contact with water.




Do not place the unit directly on or against soft furnishings such as bedding or linen.



Do not place the unit outdoors.

Getting started

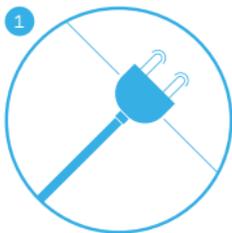

Plug in your Pure 221 air purifier.



Press the button to turn the unit on. The unit automatically sets itself to the recommended energy-efficient operating speed.



When the indicator light glows white, your unit is working properly.

On/off and speed control



On/Low

Press once to turn the unit on and set it to the recommended energy-efficient speed.



Medium

Press twice to set to medium speed.



High

Press three times to set to high speed.



Off

Press a fourth time to turn the unit off.

Moreover, Pure 221 has an Autostart feature. This means that Pure 221 will automatically restart at the set speed if a power failure occurs, the unit is unplugged or a power switch timer is used.

Filters

General information:

The unit is delivered with either a Particle filter or Particle + Carbon filter. These filters remove the following pollutants:

Particle filters remove:



PM2.5*



Dust



Pollen



Pet dander



Mold



Dust mites



Bacteria

Particle + Carbon filters remove all the above pollutants, plus:



VOC



Smoke



Chemicals



Cooking odors

*Particle matter smaller than 2.5 microns

IMPORTANT!

Use only genuine Blueair filters to ensure proper function of your unit and to qualify for full warranty coverage.

Button control functions



Change filter indicator

When the indicator turns yellow (after 5 months of operation), it's time to order a new filter.



Change filter

When the indicator light turns red (after 1 extra month of operation), you should change the main filter.



Reset the filter alert

Press the button for three seconds to reset the filter alert.


You can change the filter before the indicator light turns red, i.e. when it first turns yellow. In this case, just reset the unit after changing the filter and use for another 6 months. (see "Change the main filter")

Change the main filter

Be sure to unplug the unit before changing the main filter.




When the indicator light glows red, it's time to change the main filter.

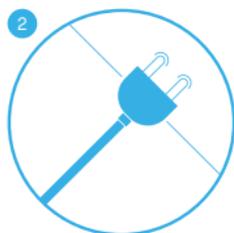


Turn off the unit and unplug it.




Gently press the release buttons on both sides of the unit until you hear a click.

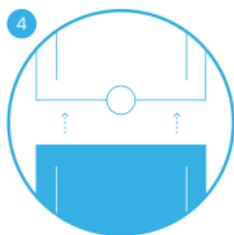


Lift off the top of the unit.

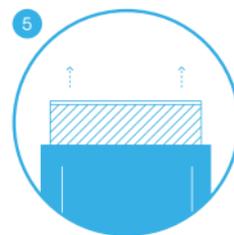


Remove the main filter from the unit.

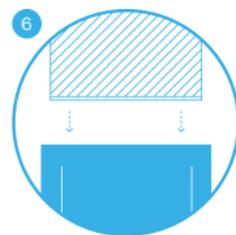

Insert the replacement filter into the unit.

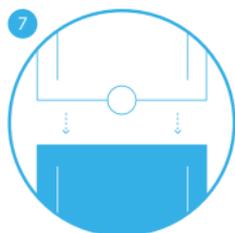

Firmly press the top of the unit onto the replacement filter until you hear a click.

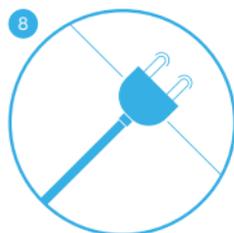

Plug in the unit.



To reset the unit, press the Pure 221 button for three seconds. The indicator will flash three times, then change from red to white.

General care

Take good care of your Pure 221 air purifier to ensure that it delivers optimal performance.

- Occasionally vacuum the inside and outside of the main filter to remove any dust.
- Change the main filter every six months, depending on the operating conditions.
- When the unit is open to change the filter, vacuum any dust that may have accumulated inside the unit.
- Occasionally wipe the top of the unit with a dry dust cloth.

Specifications¹

Room size:	50m ² (540 sq. ft.)			
Clean Air Delivery Rate (CADR)	Smoke cfm m ³ /h	 350 590	Dust  350 590	Pollen  350 590
Filter replacement indicator	Yes			
On/Off timer	No			
Speeds	1-2-3-off			
Dimensions	Height:	522 mm (20.5 in)		
	Width:	330 mm (13 in)		
	Depth:	330 mm (13 in)		
	Weight:	7 kg (15 lbs)		
Airflow rate	230 - 620 m ³ /h (135 - 365 cfm)			
Air exchange ²	5 per hour (50 m ² or 540 sq.ft.room)			
Power usage ⁴	30 - 61 W			
Noise level	31 - 56 dB(A)			
Average filter service life	six months ³			
Warranty	Local regulations			

¹Certified ratings as stated are based on U.S. version models (120VAC, 60Hz) with Blue Particle Filter. Ratings may be affected by use of other Blue filter models.

²Air changes per hour are calculated on the recommended room size, assuming 8-foot (2.4-m) ceilings. For smaller rooms, the air changes per hour will increase.

³Depending on air quality in the area of use, the recommended six-month filter lifetime may be longer.

⁴The available electrical power voltage and frequency affects the power consumption of the unit. The power consumption might therefore be different from the stated value.



www.blueair.com
www.blueair.com/contact-us

Blueair AB

Karlavägen 108
115 26 Stockholm
Sweden
Tel: +46 8 679 45 00

Blueair AB Middle East

Jafza One
Office No. AB1503
Jebel Ali Free Zone
P.O. Box No. 263947
Dubai
+971 (4)8821244

Blueair Inc.

Suite 1900
100 N LaSalle Street
Chicago, IL 60602
Tel: +1 888 258 3247

Blueair India Pvt. Ltd.

Embassy of Sweden
Nyaya Marg, Chanakyapuri
New Dehli - 110021
Tel: +91 11 4606 7121
Toll free info number: 18008331188

**Blueair (Shanghai) Trading
Co. Ltd.**

Rm 1005 City Gateway
No. 398 North Caoxi Road
Xuhui Distr, Shanghai
Tel: +86 21 6091 0981